

JC-8.871.297

颜色要求:


橙色: Pantone 716C

蓝色: Pantone 2945C

灰色: K=75

刀模线
不印刷

折痕线
不印刷




User Manual
LogEt 8 Series

Software Download: <http://www.elitechlog.com/software>

Overview

LogEt 8 series data loggers can be widely used in each stage of the storage and cold chain logistics, such as refrigerated containers/ trucks, cooler bags, cooling cabinets, medical cabinets, freezers, and laboratories.

The loggers feature an LCD screen and two buttons design. They support various start and stop modes, multiple threshold settings, two storage modes (stop when full & cyclic record) and PDF report automatically generated for users to check data without using software.

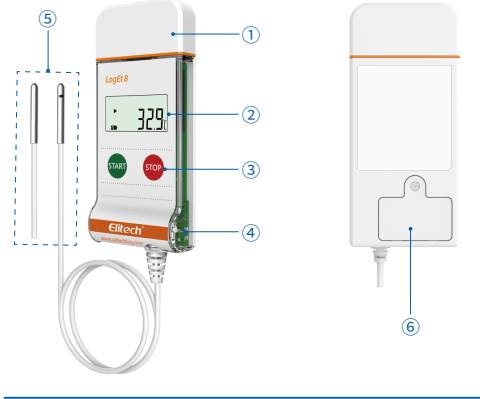

- ① USB Port
- ② LCD Screen
- ③ Button
- ④ Internal Sensor
- ⑤ External Sensor
- ⑥ Battery Cover

Model Selection

Model	Type	Measurement Range	Accuracy
LogEt 8	Internal Temperature	-30°C ~ 70°C -22°F ~ 158°F	±0.3°C/0.5°F
LogEt 8 TE	External Temperature	-40°C ~ 85°C -40°F ~ 185°F	±0.3°C/0.5°F
LogEt 8 TH	Internal Temperature and Humidity	-30°C ~ 70°C -22°F ~ 158°F 0%RH ~ 100%RH	±0.3°C/0.5°F ±1%RH (20°C ~ 80%RH), ±5%RH (other)
LogEt 8 TIE	External Temperature and Humidity	-40°C ~ 85°C -40°F ~ 185°F 0%RH ~ 100%RH	±0.3°C/0.5°F ±1%RH (20°C ~ 80%RH), ±5%RH (other)
LogEt 8 PTE	External Low Temp	-85°C ~ 150°C -121°F ~ 302°F	±1°C/1.8°F (048°F ~ 302°F)
LogEt 8 UTE	External Ultra-low Temp	-95°C ~ 150°C -129°F ~ 302°F	±1°C/1.8°F (048°F ~ 302°F)

Specifications

Resolution: Temperature: 0.1°C/0.1°F; Humidity: 0.1%RH

Memory: 16,000 points (MAX)

Logging Interval: 10 seconds ~ 24 hours

Start Mode: Press button or use software

Stop Mode: Press button, use software, or auto stop

Alarm Threshold: Configurable; Temperature: up to 3 high limits and 2 low limits; Humidity: 1 high limit and 1 low limit

Alarm Type: Single, cumulative

Alarm Delay: 10 seconds ~ 24 hours

Data Interface: USB port

Report Type: PDF data report

Battery: 3.6V disposable lithium battery 14250H (replaceable)

Battery Life: 2 years for storage and use at 10 minutes logging interval and below 25°C

Protection Level: IP65

External probe length: 1.5m

Dimensions: 100 x 46 x 19 mm (LxWxH)

Operation

1. Install Software
Please download and install the free ElitechLog software (macOS and Windows) from www.elitechlog.com/software.


2. Configure Parameters
First connect the data logger to the computer USB port, wait until the U icon shows on the LCD, then configure via:
ElitechLog software:
- If you do not need to change the default parameters (in Appendix), please click **Quick Reset** under **Summary** menu to synchronize local time before usage;
- If you need to change the parameters, please click the **Parameter** menu, enter your preferred values, and click the **Save Parameter** button to complete the configuration.

Warning! For first time user or after battery replacement:
To avoid time or time zone errors, please make sure you click **Quick Reset** or **Save Parameter** before usage to sync and configure your local time into the logger.

3. Start Logging
Press Button: Press and hold the left button for 5 seconds until the ► icon shows on the LCD, indicating the logger starts logging.
Auto Start: Immediate Start: The logger starts logging after plugged out from the computer.
Timed Start: The logger starts counting after removed from the computer, and will start logging automatically after the set date/time.

Note: If the ► icon keeps flashing, it means the logger configured with start delay; it will start logging after the set delay time elapses.

4. Mark Events
Press and hold the left button for 5 seconds to mark current temperature and time, up to 10 groups. After events marked, the LCD will display 📌 and currently marked groups.



Elitech Technology, INC.
www.elitechlog.com
1551 McCarthy Blvd, Suite 112
Milpitas, CA 95035 USA

V1.0

媒体编号


旧图纸总号

底图总号

日期 签名

格式 (1)

技术要求:

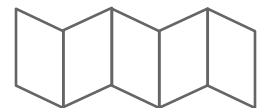- 1.材质:105g哑粉纸;
- 2.尺寸:450*118mm,公差:±0.5 mm;
- 3.印刷要求:专色印刷;
- 4.折叠方式: 
折叠后尺寸:118*75 mm;
- 5.环保要求:材料和油墨等符合RoHS要求;
- 6.其他要求:印刷清晰,禁止模糊、破损、毛刺等不良现象。

标记	数量	更改单号	签名	日期
设计				
审核				
工艺				
标准化				
批准				

制图:

描图:

幅面:

镀涂

LogEt 8 系列记录仪
说明书(中文常规) ROHS

25050105591

JC-8.871.297

阶段	标记	质量	比例
----	----	----	----

第 2 张	共 2 张
-------	-------

江苏省精创电气股份有限公司

Л67ТЛ8'8-ЦГ

颜色要求:

橙色: Pantone 716C

蓝色: Pantone 2945C

灰色: K=75

刀模线
不印刷

折痕线
不印刷

5. Stop Logging
Press Button*: Press and hold the right button for 5 seconds until the ■ icon shows on the LCD, indicating the logger stops logging.
Auto Stop**: When the recorded points reach the maximum memory, the logger will stop automatically.
Use Software: Open ElitechLog software, click Summary menu, and Stop Logging button.
Note: *Stop via Press Button is the default. If set as disabled, this function will be invalid, please open ElitechLog software and click Stop Logging button to stop it.
**The Auto Stop function will be disabled automatically if you enabled the Circular Logging.

6. Download Data
Connect the data logger to your computer USB port, wait until the U icon shows on the LCD, then download data:
Without ElitechLog Software: Simply find and open the removable storage device ElitechLog, save the auto generated PDF report to your computer for viewing.
With ElitechLog software: After the logger auto-upload its data to the ElitechLog software, click Export and select your preferred file format to export. If data failed to auto-upload, please manually click Download and then repeat above operation.

7. Re-use the Logger
To reuse a logger, please stopped it first. Then connect it to your computer and use ElitechLog software to save or export the data. Next, reconfigure the logger by repeating the operations in 2. Configure Parameters*. After finished, follow 3. Start Logging to restart the logger for new logging.
Warning! * To make space for new loggings, all previous logging data inside the logger will be deleted after re-configuration. If you forgot to save/export data, please try to locate the logger in the History menu of ElitechLog software.

8. Repeat Start:
To restart the stopped logger, you may press and hold the left button to start logging quickly without reconfiguration.
Note: Please backup data before restart by repeating 6. Download Data. Without ElitechLog Software.

Status Indication

1. Buttons

Operations	Function
Press and hold the left button for 5s	Start logging
Press and hold the right button for 5s	Stop logging
Press and release the left button	Check/Switch interfaces
Press and release the right button	Back to main menu
Press and hold the left button for 5s	Mark events (under logging status)

2. LCD Screen

① Function	⑤ Battery Level
② High limit alarm	⑥ Temperature/Humidity Value
③ Low limit alarm	⑦ Date
④ Working status	⑧ Time

3. LCD Interface

Meaning	Display
1. Timed start	20
Delay start	20
2. Not start	20
3. Started	30%
4. Recorded points	16000
5. Maximum temperature	50.0
6. Minimum temperature	20
7. MKT value	80
8. Average temperature	80
9. High temperature limit 3	60.0
10. High temperature limit 2	50.0
11. High temperature limit 1	40.0
12. Low temperature limit 1	10
13. Low temperature limit 2	-20
14. High humidity limit	880

Meaning	Display
15. Low humidity limit	200
16. Maximum humidity	630
17. Minimum humidity	30
18. Average humidity	530
19. Current date & time	180606
20. Sensor error	Err
21. PDF generation progress	PDF 88
22. No alarm	✓
23. Alarmed	✗
24. Marked	■
25. Data deleted	----
26. USB communicating	USB

Battery Replacement

- Remove the screws, open the battery cover and take out the old battery.
- Install a new battery with negative(-) towards the spring.
- Mount the battery cover and tighten the screw.

What's Included

- Temperature (Humidity) Data Logger x 1
- User Manual x 1
- Certificate of Calibration x 1

Warning!

- Please store your logger at room temperature.
- If you use the logger for the first time, please use ElitechLog software to synchronize system time and configure parameters.
- Do not remove the battery if the logger is logging.
- The LCD screen will be auto off after 15 seconds of inactivity (by default). Press the button again to turn on the screen.
- Any parameter configuration on ElitechLog software will delete all logged data inside the logger. Please save data before you apply any new configurations.
- Do not use the logger for long-distance transport if the battery is not full.

Default Parameter Configurations

Parameter	Default
Logging Interval	10 min
Start Mode	Press Button
Start Delay	/
Stop Mode - Press Button	Enable
Temporary PDF	Enable
Temperature unit	°C
Time Zone	UTC+0:00
Repeat Start	Disable
Circular Logging	Disable
Alarm Mode	Multiple Alarms
Alarm Type	Single
Alarm delay	/
High Temperature Limit H3	/
High Temperature Limit H2	/
High Temperature Limit H1	8°C
Low Temperature Limit L1	2°C
Low Temperature Limit L2	/
Calibration Temperature	0°C
High Humidity Limit	/
Low Humidity Limit	/
Calibration Humidity	/

媒体编号

旧图纸总号

底图总号

日期 签名

格式 (1)

技术要求:

- 1.材质: 105g哑粉纸;
- 2.尺寸: 450*118mm, 公差: ±0.5 mm;
- 3.印刷要求: 专色印刷;
- 4.折叠方式: 折叠后尺寸: 118*75 mm;
- 5.环保要求: 材料和油墨等符合RoHS要求;
- 6.其他要求: 印刷清晰, 禁止模糊、破损、毛刺等不良现象。

标记	数量	更改单号	签名	日期
设计				
审核				
工艺				
标准化				
批准				

制图:

描图:

幅面:

镀涂

LogEt 8 系列记录仪
说明书 (中文常规) ROHS

25050105591

JC-8.871.297

阶段 标记 质量 比例

第 2 张 共 2 张

江苏省精创电气股份有限公司